

2 sec = OFF

Lino L2G

Transportation

User Manual:



www.leica-geosystems.com

	LASER 2	
IEC 60825-1:2014	λ=510-520nm	Pmax<1mW
		tp=35-65µs, cw

SAP. No. 864426

- when it has to be right



Adapter setup

5/8"
1/4"

Usable with UAL 130

Usable with Receiver

Quick Start

Leica Lino L2G

- Status LED
- Laser key
- Battery pack
- Window of vertical line
- Window of horizontal line
- Levelling lock
- Tripod thread 1/4"


- when it has to be right




Insert batteries/Li-Ion




1x - Laser on

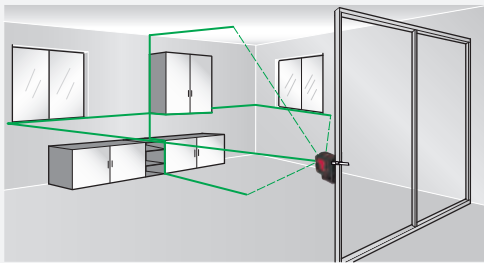

3x - Vertical mode

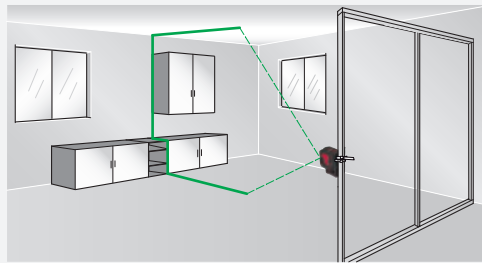


Charging Li-Ion battery

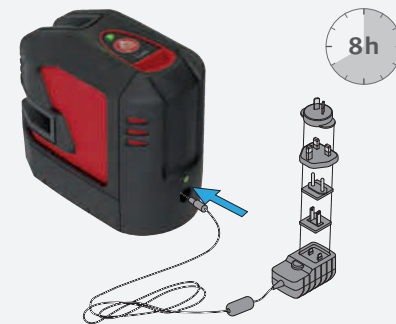


Self levelling / Levelling lock



2x - Horizontal mode

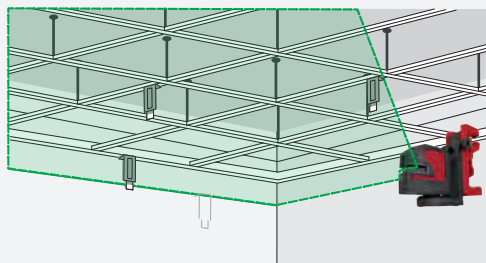

+ 1x ——— + 1x |

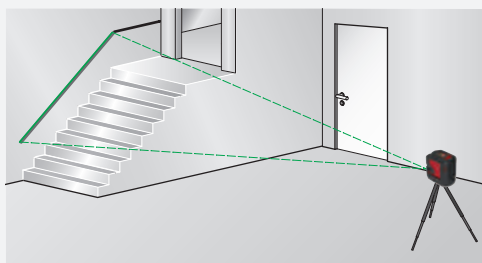

Status LED

